


Training screen

ND training screen is an effective training aid that illuminates forgotten areas where particles can hide and cause the spread of pathogens.

ND Training screen:

➔ Hand hygiene training

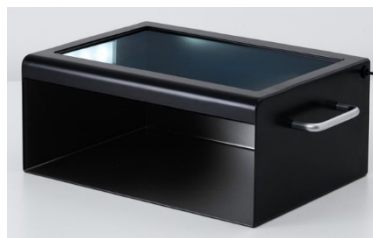

Use:

Poor hygiene can be the cause of many cases of illness, both in humans but also in relation to the spread of infections/bacteria between production units.

It is estimated that more than 30% of food-borne infections could be avoided by proper hand hygiene.

ND training screen can illuminate forgotten areas where particles can hide:

1. Add 1-2 pumps of fluorescent lotion/hand sanitizer and distribute it as with a normal thorough hand sanitizer.
2. Place your hands in the cabinet. The entire surface of both hands should glow evenly. Repeat step 1 if necessary, until the entire surface glows evenly.
3. Wash your hands thoroughly. Dry them and check the cabinet again. The areas that are still shiny have not been washed sufficiently.
4. Repeat as needed and look for improvements.



Read more about UVC
here

Technical information:

Specifications	
Specifications may vary based on individual configurations	
Product name	ND Training of Handhygiejne
Material	Aluminium
Weight	1kg
Length × Height × Width	251mm × 150mm × 357mm
Light source	LED